



www.grandfirebbqs.com.au

GrandFire Grill Sear Burner change Instructions

**Sear Burner Change out Kits for GrandFire Models:
GF26, GF32LB, GF38LB, GFD30LB & GFD42LB**

Sear Burner Orifice for **Classic** Models

GF26, GF32LB & GF38LB:

LP Model--- Φ 1.05mm



NG Model--- Φ 1.78mm



Sear Burner x 1 pcs



Sear Burner Orifice for **Deluxe** Models:

GFD30LB & GFD42LB

LP Model--- Φ 1.30mm



NG Model--- Φ 2.20mm



Sear Grate x 1 pcs



Glass Shield x 1 pcs



TOOLS NEEDED:

6mm box wrench (6mm) x 1 pcs


Small Straight Screwdriver x 1 pcs

Crosshead Screwdriver x 1pcs

SEAR BURNER CHANGE INSTRUCTIONS

1: REMOVE TUBE BURNER

Remove top grate & burner cover above tube burner. Unscrew the secure nut and take burner out.

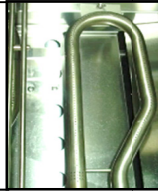


2: REMOVE CROSS FIRE

Remove the crossfire beside this burner as shown.



3: CHANGE INJECTOR

Locate injector. Use a 6mm box wrench to loosen the injector GENTLY!

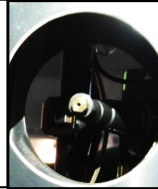

4: CHANGE INJECTOR

Install sear burner injector GENTLY!
DO NOT over tighten!
DOUBLE CHECK for NG or LP!



5: INSTALL SEAR BURNER

Put sear burner in position and tighten the nut at the back.




6: SET GLASS & GRATE

Put glass shield and sear grate above sear burner.



7: FIRE TEST*

Light sear burner and keep burning for 5 minutes. All ceramic tiles should burn evenly.

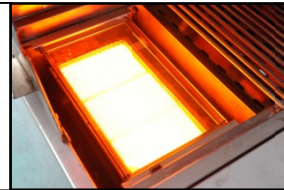

8: LOW FLAME SETTING*

Turn knob down to low position. Adjust low setting screw, make it burning steady for 5 minutes.



*Please refer to your user manual for detail procedures of Fire Test and Low Flame Setting!